


**START HERE** The ZROADZ Series Grilles comes into 2 different configurations. One style features the LED Light Bar mounting hidden on the backside, while the other style has exposed mounting provisions on the face side of the grille. Please note this and identify your ZROADZ Grille Series configuration and follow the instruction version that corresponds with your grille.


**GRILLE CONFIGURATION STYLE 1**



**STEP 1** Lay out your parts. From the backside of the grille, put into place the ZROADZ Logo Backing Plate.

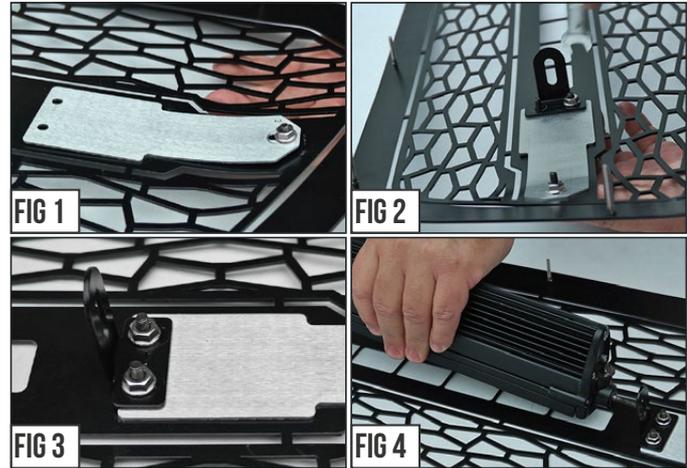


**STEP 2** Put into place one of the Bracket Tabs and secure with provided Hardware as seen in Fig. # 2-4 and then from the backside of grille position LED Light Bar.

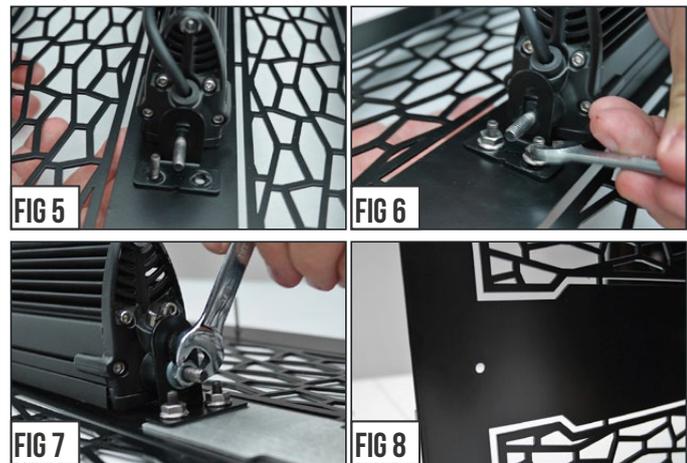


**STEP 3** With LED Light placement set, put into position the remaining bracket and the finally tighten LED and all Mounting Brackets into their final secured position.


**GRILLE CONFIGURATION STYLE 2**

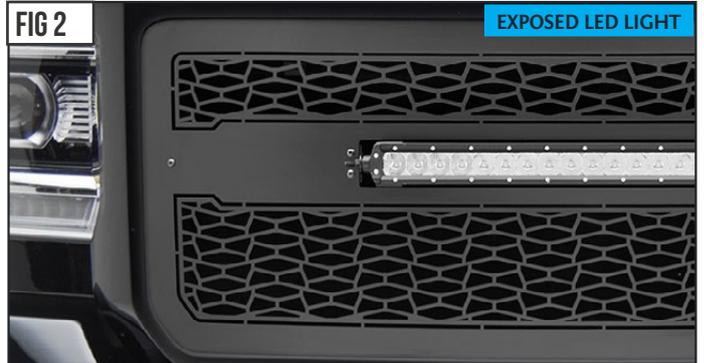

**STEP 1** Lay out your parts. From the backside of the grille, put into place the ZROADZ Logo Backing Plate.

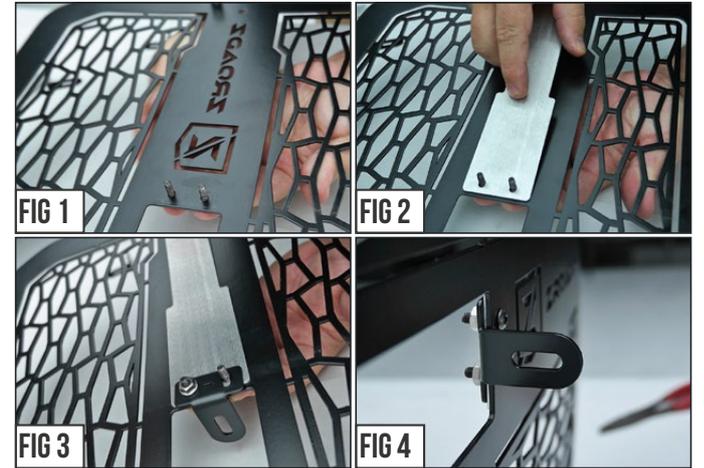

**STEP 2** Put into place one of the Bracket Tabs and secure with provided Hardware as seen in Fig. # 1-4.

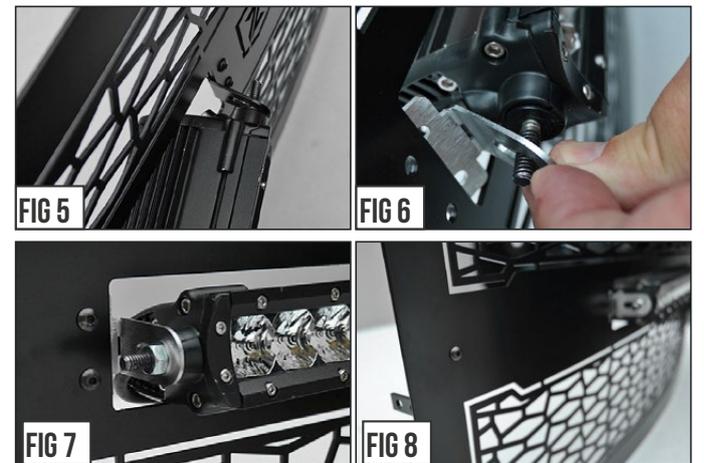

**STEP 3** From the face side of grille slip the LED Light bar into place. On the opposite side, position the remaining bracket and finally tighten LED and Brackets into position.

**STEP 4** There is a final step for both styles of ZROADZ Grilles. See both of the Figure #8 Images and note that there is an exposed hole. Use the Provided Hardware Button Head Screw and fill the hole and tightened down with Nut. This will create symmetrical look from side to side.

**GRILLE ASSEMBLY - COMPLETE**

**Z315721**  
**2013 FORD**  
**F-150**



**Z315721**  
**2013 FORD**  
**F-150**

## **2013 FORD F-150**

### **ZROADZ Series Grille**

#### **TOOLS REQUIRED:**

Plastic Prybar  
Die Grinder  
Drill & 1/8 Drillbit

#### **PARTS LIST:**

(1) Mesh Grille  
(8) L-Brackets  
(8) 6/32 Nylon Lock Nuts  
(2) #8 Screws

**Install time: 45 Mins**

(2) Flatnuts

**PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION.**

#### **Step 1 Remove Factory Grille Shell**

- Remove 6 Bolts along the top of the Grille Shell. (Fig. 1)
- Remove 2 Clips along the Vehicle Support Bar. (Fig. 2)
- Place the Plastic Prybar in between the Grille Shell and Hood, Firmly start nudging away the Grille Shell from the Hood. (the Grille Shell is latched on with Clips.). (Fig. 3) Remove the Grille Shell.

#### **Step 2 Installing Grille**

- With a Die Grinder, Remove the Vertical and Horizontal Plastic Bars that are around the Grille. (Fig. 4 & 5)
- Place the Grille into the Grille Opening. (Fig. 6)
- Place L-Brackets onto the Threaded Studs that are on the Grille and use Nylon Lock Nuts. (Fig. 7)
- Use the 1/8 Drillbit to Drill through the Brackets that are on the Sides of the Grille and place #8 Screws through them, Place Flatnuts behind to Thread the #8 Screw. (Fig. 8)

**INSTALLATION COMPLETE**

