



ZROADZ

DYNAMIC LED MOUNTING SOLUTIONS



REAR MODULAR BAR - MULTI LED / ACCESSORY MOUNT

Z350003

UNIVERSAL ACCESSORY MOUNT / MULTI LED SIDE MOUNT / LED LIGHT POD SIDE MOUNTS

PARTS ARE PATENT PENDING. ALL RIGHTS RESERVED - COPYRIGHT ©2016 - ZROADZ LED, INC.

PARTS INCLUDED

- (1) Universal Accessory Mount
- (1) Bracket Coupler

LED LIGHTS INCLUDED

Z350003 - No LED Lights Included

* LED Lights include a separate hardware kit.

HARDWARE INCLUDED

Z350003

- (3) - 10 - 32 x 7/16 Button Head Allen Stainless Steel Cap Screw
- (1) - 1/4 - 20 x 1/2 Stainless Steel Hex Bolt
- (1) - 1/4 - 28 x 1 1/2 Socket Head Cap Screw
- (1) - 1/2 Flat Washer

TOOLS REQUIRED

- Various Socket Set
- Various Wrenches
- Ratchet Tool
- Ratchet Extensions

INSTALLATION GUIDE

START HERE

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model. To assure your part is correct; our tech department can be contacted at orders@zroadz.com to verify fitment and assist with technical questions. All other inquires can be directed to orders@zroadz.com. In the event you do not have internet access please call 844-653-8040

* APPLICATION MODELS VARY. WE RECOMMEND TO VERIFY FITMENT BEFORE BEGINNING INSTALLATION PROCESS.
* IMAGES FEATURED IN THE INSTRUCTION DOCUMENTS MAY NOT ALWAYS EXACTLY MATCH YOUR MODEL OR PART.

BEFORE YOU BEGIN

START HERE: Turn off engine, chalk tires with stop block, open the hood and disconnect the battery.

LED LIGHT BRACKET INSTALLATION

- STEP 1** 1) Start by assembling the Coupler and Set Screw.



FIG 1

MOVE ONTO
STEP 2

STEP 2

- 2) Screw the Steel Socket Caps into the Bracket Coupler as seen in Figure #2.

DO NOT BOTTOM
OUT as you will need it
adjustable.

SEE FIGURE 2



FIG 2



UNIVERSAL ACCESSORY MOUNT

PARTS ARE PATENT PENDING. ALL RIGHTS RESERVED - COPYRIGHT ©2016 - ZROADZ LED, INC.



FIG 3



FIG 4

STEP 3

SEE FIGURE 3

3) Assemble Bracket Coupler to the Universal Accessory Mount with the (3) Provided 1032 x .500 Button Head Allen Cap Stainless Steel Screws.

STEP 4

SEE FIGURES 4 & 5

4) Note Figure #4 and how the Coupler Set Screw is located and clocked straight down from the Mounting Tab to 3:00 o'clock.



FIG 5

STEP 5

SEE FIGURE 5

5) Loosen out the Set Screw so you can easily slide onto Modular Rack Cross Member Tube.

STEP 6

SEE FIGURE 6 - 8

6) Slip off the Upright Mount so that you can slide the assembled Universal Accessory Mount over the Modular Rack Cross Member Tube.

Put back into place the Upright Mount.

FIT MOUNT OVER TUBE



FIG 6



FIG 7

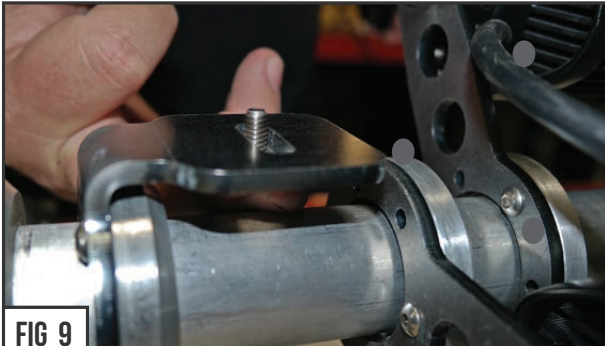


FIG 8



UNIVERSAL ACCESSORY MOUNT

PARTS ARE PATENT PENDING. ALL RIGHTS RESERVED - COPYRIGHT ©2016 - ZROADZ LED, INC.



NOTE

These next Steps #7 - #10 are specifically for accessory mounting.

If you are intending to mount an LED Light Pod to the Universal Accessory Mount, than move onto Page #4 Step #11.


STEP 7

SEE FIGURES 9 - 11

7) Insert 1/4 - 20" Bolt Hardware into position from the bottom of the Universal Accessory Mounting Tab.

STEP 8

8) Insert and install Accessory Mounting component such as GoPro Tri Pod Mount, Quick Release Mount, Mic Stand Mount, ect.

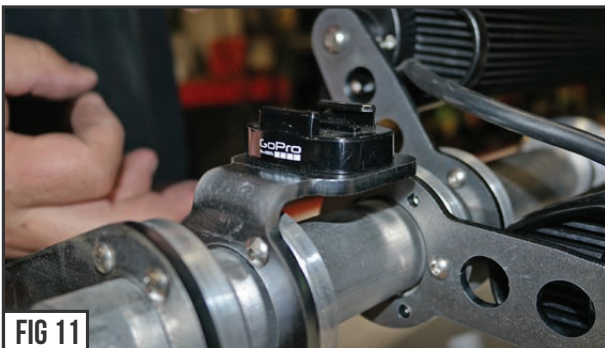

STEP 9

SEE FIGURES 11 - 13

9) Tighten down till secure. Do not overtighten.

STEP 10

10) Finally tighten Universal Accessory Mount and lock it into place by tightening the Coupler Set Screw so that it pinches tight to the Modular Rack Cross Member Tube.




UNIVERSAL ACCESSORY MOUNT INSTALLATION - COMPLETE



UNIVERSAL ACCESSORY MOUNT

PARTS ARE PATENT PENDING. ALL RIGHTS RESERVED - COPYRIGHT ©2016 - ZROADZ LED, INC.

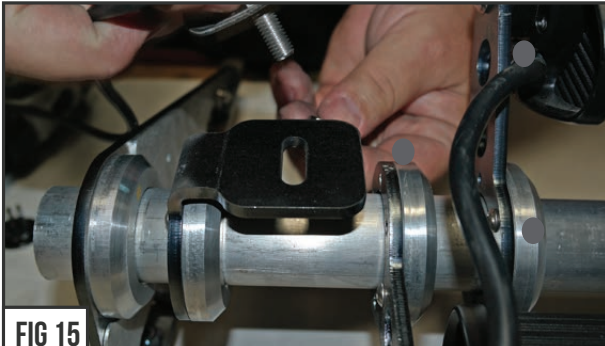

STEP 11

SEE FIGURE 15

11) Take assembled LED Light Pod with Mounting cradle and hardware, and insert into the Universal Accessory Mounting Tab adjustable mounting slot.

STEP 12

SEE FIGURES 15 - 17

12) From below the Universal Accessory Mounting Tab, insert and thread a nut till LED Light Pod is secure.



STEP 13

SEE FIGURE 17 - 19

13) At this point, you will want to position the LED Light Pod to your desired position. It can be positioned to face forward, backwards, sideways, ect. Tighten down till secure.

STEP 14

14) Finally tighten Universal Accessory Mount and lock it into place by tightening the Coupler Set Screw so that it pinches tight to the Modular Rack Cross Member Tube.

LED LIGHT POD MOUNTED



UNIVERSAL ACCESSORY MOUNT INSTALLATION - COMPLETE



ZROADZ

DYNAMIC LED MOUNTING SOLUTIONS

ZROADZ PRODUCT WARRANTY

ZROADZ PRODUCT WARRANTY

ZROADZ warrants its grille products to be free from defects in material and workmanship for the lifetime of the grille. ZROADZ warrants the finish of its grille products for a 3 year period beginning at the time of sale to the end user. These warranties are limited warranties and do not cover abuse, modification or improper installation nor do they cover finish failure caused by caustic cleaning agents, road salts or other chemicals. ZROADZ reserves the right to repair or replace a defective product at its sole discretion. Any ZROADZ product must be returned to ZROADZ for warranty consideration and must be returned at the customer's expense. In the event that the product is deemed to be defective, the repaired or replaced item will be returned via a surface shipping method to the customer at ZROADZ expense. No provision is made for any labor, rental car or other costs incurred by the failure of its products.

LED LIGHTING EQUIPMENT INSTALLATION / DISCLAIMER

WARNING

PLEASE CONSULT YOUR LOCAL AUTOMOTIVE ELECTRICAL PROFESSIONAL FOR INSTALLATION SERVICES AND ADVICE. ZROADZ IS ONLY EQUIPPED TO PROVIDE BASIC TECHNICAL ASSISTANCE DUE TO THE DIVERSITY OF VEHICLES, VEHICLE OPTIONS & MODIFICATIONS AND LIGHTING CONFIGURATION OPTIONS AVAILABLE. ZROADZ cannot be held liable due to improper component installation and / or faulty wiring.

GENERAL GUIDELINES

LED Lights & LED Light Bars operate at relatively high currents and should only be installed by qualified personnel with experience in switched / relayed high draw DC Circuits.

- Light Bars are designed for use only with standard 12v DC power systems
- Light Bars are for OFF-ROAD USE ONLY. Check your local laws & regulations regarding vehicle mounted lights.
- Some Light Bars are equipped with waterproof connectors while others are simply pig-tailed
- Red Wires = POSITIVE | Black Wires = NEGATIVE
- ALWAYS install your lights on a fused circuit. Basic fusing guidelines: maximum 5A for every 10" of LED Light Bar.

GENERAL USE, INSTALL AND ADJUSTMENT TIPS

NOTE 1: ZROADZ LED Light Bars themselves are for OFF-ROAD USE ONLY.

NOTE 2: Light Bars depending on the configuration of your vehicle and its options and/or modifications may need to be adjusted for appropriate beam projection. To adjust the angle of your light bars simply loosen the mounting hardware on either side of each Light Bar, rotate the Light Bar to adjust the angle, then tighten the hardware once the desired angle is achieved (please be careful not to over-tighten the mounting hardware or scratch the protective powder-coat finish). It is best to adjust the angle with the vehicle on level ground with the lights facing a wall, garage door or other solid barrier at a distance of approximately 25-30 feet.

NOTE 3: Please consult a qualified automotive electrical professional for light bar wiring installation.

NOTE 4: An optional universal wiring harness (part# Z390029S-A) is also available that includes high-heat & oil/fuel resistant wires, waterproof connector, 12v relay, 12v rocker switch, inline fuse holder. Our universal wiring harness significantly expedites the installation process but is not a vehicles specific "Plug & Play" product and does not eliminate the need for a professional installation.

Please contact your local ZROADZ dealer for more information or visit www.zroadz.com.

PRODUCT CARE INFORMATION

PRODUCT CARE INFORMATION

Wash regularly as you would when caring for your vehicles. Never use dish soap. Never leave wet water spots as that may leave a blemish.

MATTE BLACK FINISH

Paint warranty applies to defects in material and / or workmanship, it does not cover the matte finish surface appearance.

To enjoy the matte appearance for many years to come, please follow these owner care and maintenance tips.

Get a no-shine matte car wash soap that uses no fillers, no silicone, and won't strip your matte paint of its layer of protection.

Do not use wax, detail spray, armorall®, or any products made for normal paint. Use only products specifically developed for matte finish paint. Do not use products that are even mildly abrasive, such as polishes, glazes, or rubbing compounds. Do not use mechanical cleaners or polishers. Do not use terrycloth, cloth, or paper towels. Do not rub the finish vigorously, this will burnish the paint finish, causing a permanent shiny spot. Shiny spots cannot be removed.

Do not use commercial car wash facilities or their shine enhancement products. Most car wash brushes, large mechanized "towels," and shine enhancement products can damage matte paint.

Remove foreign substances such as insect remains, tar, and road debris using a soft applicator and a mild solvent; saturate and soak area before cleaning—rub lightly.

Hand-wash with a soft wash mitt and mild cleaning product safe for matte paint. Use microfiber cleaning cloths with alcohol-based window cleaner for basic surface clean-up.

GLOSS BLACK FINISH

ZROADZ with Gloss Black Powder Coated Finish may be washed regularly as you would when caring for your vehicles finish using soap and water. ZROADZ should be waxed at the same time that you wax the vehicle. As a general rule, anything you use to clean your vehicles painted surfaces can be used to clean and maintain your ZROADZ grille. A Gloss powder Coated Finish can be cared for in the same fashion that you would care for your vehicles factory paint job. Never leave wet water spots as that may leave a blemish.